5600 mAh

PowerNOW! 5600

User Guide

Specifications:

Input: 5.0V/1A
Output: 5.0V/1A
Battery: 2X Samsung 3.7V Li-ion 18650 2800mAh
Capacity: 5600
Charging Time: About 4 to 6 Hours
Charging Cycles: Over 500 Times
Charging Method: USB
Working Environment:
Temperature: 20-45°C
Humidity: 85% Maximum

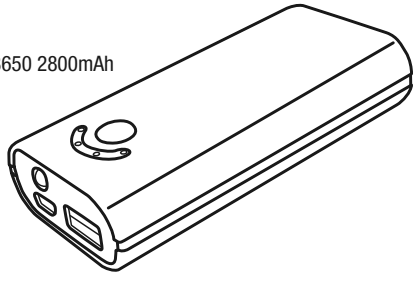

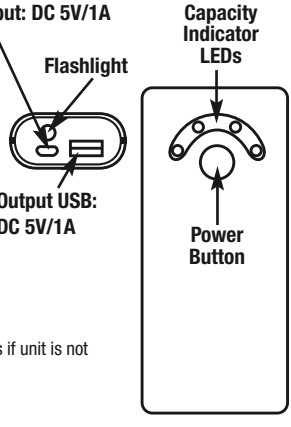

- Press **Power Button** twice to turn flashlight on.
- Press **Power Button** twice again to turn flashlight off.
- Press **Power Button** once to display power capacity
- **Capacity Indicator LEDs** switch off after ten seconds if unit is not charging a device or being charged

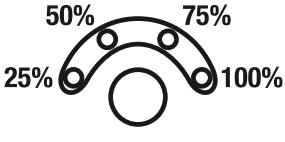

These four LEDs show the amount of power remaining in the unit. Four lights on indicates 100% power. Three lights on indicates 75% power. Two lights on indicates 50% power. One light on indicates 25% or less power. When the unit is nearly out of power, the four LEDs flash on and off.

Safety Instructions:

Please read the following instructions carefully. Improper use may damage the PowerNOW! 5600 or the device being charged.

- Always check to make sure the device being charged is compatible with the PowerNOW! 5600.
- Do not drop or strike the unit.
- Do not disassemble. Contains no user serviceable parts.
- Do not expose to open flames or high temperatures.
- Do not submerge in water.
- Do not use if the exterior shell is damaged.
- Use only at temperatures from 20-45°C

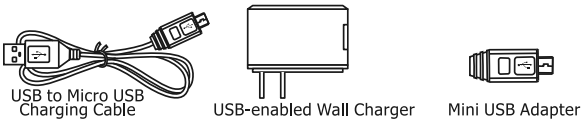

The **PowerNOW! 5600** comes with a USB to Micro USB Charging Cable, a Mini USB Adapter, and a USB-enabled Wall Charger.

Charging the PowerNOW! 5600

For best results, charge the* PowerNOW! 5600 *for at least eight hours before first use. You can charge the unit using the included USB-enabled wall charger or by plugging it into an available USB port on your computer.

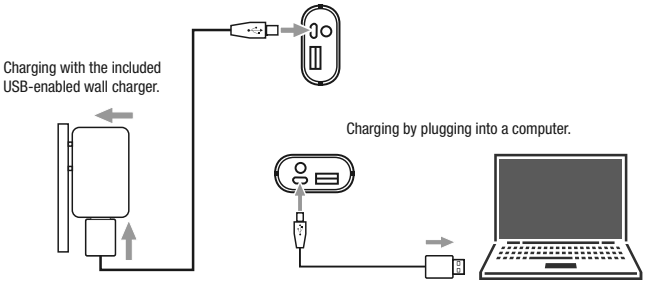

Charging a Smartphone or Other Device with the PowerNOW! 5600

Plug the USB end of your charging cable into the USB Output port on the **PowerNOW! 5600**. Plug the other end of your charging cable into the device to be charged. Press the Power Button on the **PowerNOW! 5600** to begin charging your device.

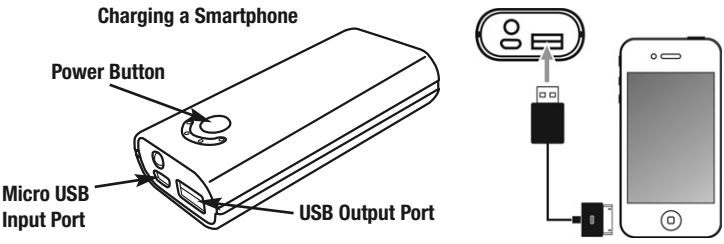

Troubleshooting

The PowerNOW! 5600 is Not Charging My Device

Check to make sure that the device is compatible with the charger, that the devices are properly connected, and the charging cable is not damaged. Try using a different charging cable. If it is still not charging the device, the PowerNOW! 5600 may need to be recharged, or it may be damaged or defective.

The PowerNOW! 5600 Will Not Recharge

Check to make sure that the charging cable is plugged in to the Micro USB Input port of the PowerNOW! 5600. The charging cable or charging unit may be damaged. Try using a different one.

Caution

Store the PowerNOW! 5600 in a cool, dry place. Avoid water and corrosive chemicals. Do not violently shake or strike. Device contains no user-serviceable parts. Do not disassemble. Discontinue use if the case is damaged in any way or if the device overheats.

How to Properly Dispose of Batteries

This product contains a lithium-ion battery. To properly dispose of expired batteries, view your city's website or newsletter to find what guidelines, if any, should be followed and to make note of their designated hazardous waste collection days.

Technical Support

Email: support+PN5600@portablepowerpacks.com
Phone: (248) 236-0061 9:00am - 5:00pm EST, M-F

FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: a) Reorient or relocate the receiving antenna b) Increase the separation between the equipment and receiver c) Connect the equipment into an outlet different from that to which the receiver is connected d) Consult the dealer or an experienced radio/TV technician for help.

Note 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

One (1) Year Limited Warranty

PC Treasures, Inc. warrants this product to be free from defects in materials and workmanship. This warranty covers the original purchaser only, and is not transferable to anyone who subsequently buys, leases, or otherwise obtains from you. Your One Year Limited Warranty begins on the date of purchase. Your original purchase invoice or sales receipt, showing date of purchase, is your proof of warranty period. The duration of this warranty does not extend beyond the initial period of coverage should any repairs or replacements be made or performed.

This warranty does not extend to any product not purchased from PC Treasures, Inc., or an authorized PC Treasures, Inc. reseller. This warranty does not extend to product that has been damaged or rendered defective as a result of use for which the product is not intended, is contrary to instructions provided in the user manual, as a result of the use of parts not manufactured or sold by PC Treasures, Inc., or due to any misuse, abuse, negligence, modification, or improper packing when returning product to PC Treasures, Inc.

EXCEPT FOR THE WARRANTY SET FORTH HEREIN, PC TREASURES, INC. DISCLAIMS ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED OR STATUTORY, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. ANY IMPLIED WARRANTIES THAT MAY BE IMPOSED BY APPLICABLE LAW ARE LIMITED TO THE TERM OF THIS WARRANTY. IN NO EVENT SHALL PC TREASURES, INC. BE LIABLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, INCLUDING BUT NOT LIMITED TO LOSS OF BUSINESS, PROFITS, DATA OR USE, WHETHER IN AN ACTION IN CONTRACT OR TORT OR BASED ON A WARRANTY, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE PRODUCT. YOU AGREE THAT REPAIR, AND (UPON AVAILABILITY) REPLACEMENT, AS APPLICABLE, UNDER THE WARRANTY SERVICES DESCRIBED HEREIN IS YOUR SOLE AND EXCLUSIVE REMEDY WITH RESPECT TO ANY BREACH OF THE PC TREASURES, INC. LIMITED WARRANTY SET FORTH HEREIN.

How Do I Obtain Warranty Service?

Email warranty+PN5600@portablepowerpacks.com or call (248) 236-0061 to report a claim, at which time PC Treasures, Inc. technicians will attempt to solve any issues. If unable to resolve your issue, you will be issued an RMA to authorize the return of the item for repair or replacement. All charges incurred while returning product, including postage, duties, export taxes, and customs duties, are the responsibility of purchaser, and purchaser assumes all risk of loss during shipment.

Models Covered Under This Warranty: 09441, 09442, 09443, 09444, 09445, 09446

Made in China by PC Treasures, Inc., 3720 Lapeer Rd., Auburn Hills, MI 48326

PC Treasures, PowerNOW! 5600, and the PowerNOW! 5600 logo are trademarks or registered trademarks of PC Treasures, Inc. © 2014 PC Treasures, Inc. All rights reserved.